


Vertically hanging

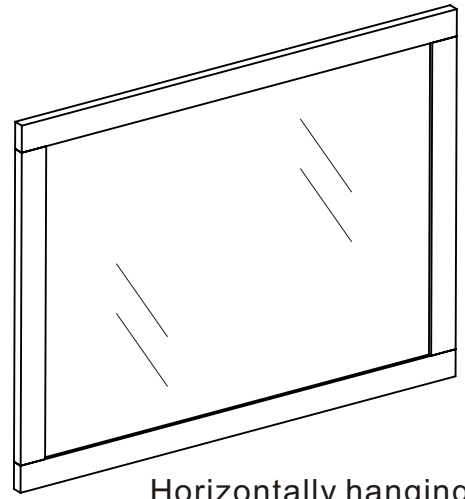

Horizontally hanging

Tools required for installation




Electric drill



Drill bit
(Φ6)



Tape measure
(3m~5m)



Silicone



Pencil



Screwdriver

Cabinet



2E



2B

