

A x 1
Spout

TOOLS INCLUDED



Allen key



Aerator Spanner

TOOLS REQUIRED



Wrench




Measuring tape



Teflon tape




Pencil

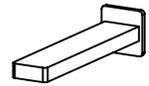


IS9020
Finished view

INSTALLATION INSTRUCTIONS

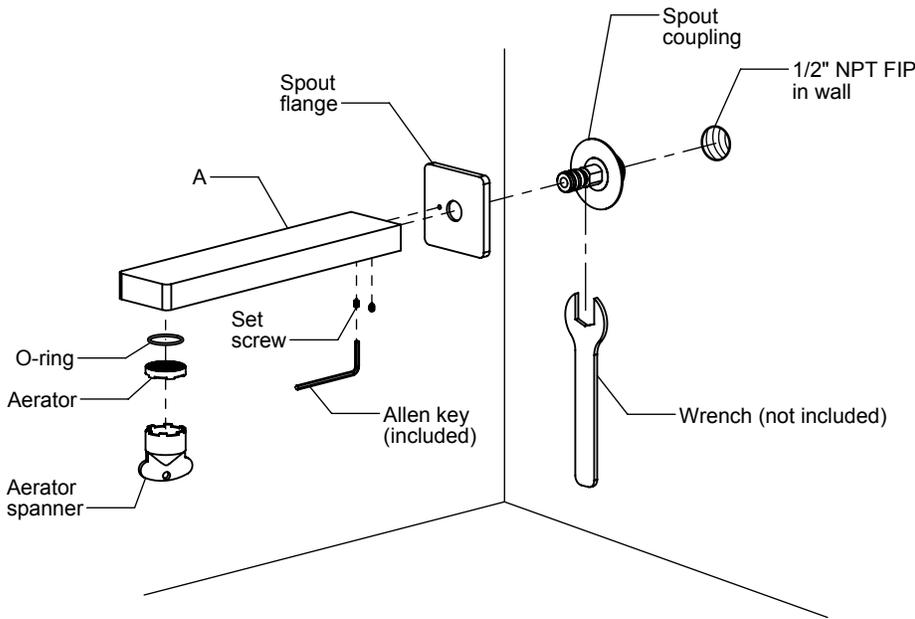


- 1** Figure out desired placement of the spout A in shower wall. Plumb at desired location with 1/2" NPT FIP so that the flange of the spout coupling sits flush with finished wall when fully inserted.
- 2** Screw the spout coupling into wall using a wrench (not provided). Use teflon if necessary. Flange of spout coupling must sit against with the finished wall.
- 3** Align the spout flange onto spout A and insert spout A into coupling so that the flange of spout makes contact with finished wall. Tighten both set screws using the provided Allen Key.
- 4** Remove the aerator from spout using the aerator spanner. Flush the line and insert aerator back in. Save aerator spanner for future use.

SPOUT IS9020 SPECS

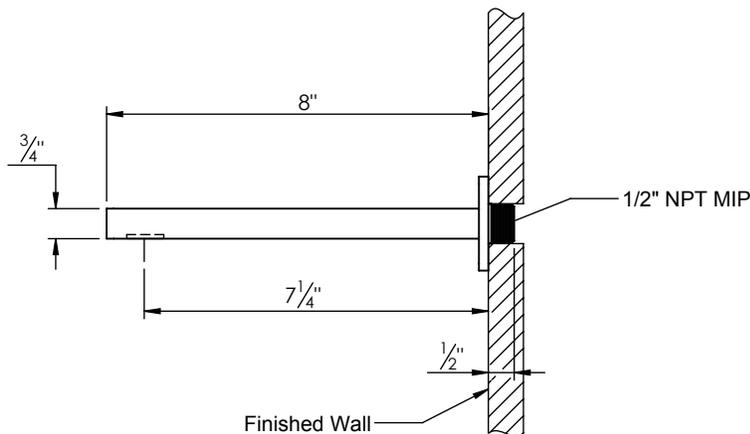

SIDE VIEW

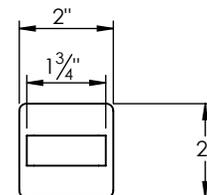

FRONT VIEW